


The Installation Guide for NVR and IP Cameras

Step 1: Install devices

Store network topology, cameras, hard disk video recorder and other network devices are connected to the same switch to ensure that the computer and monitoring equipment are in the same LAN

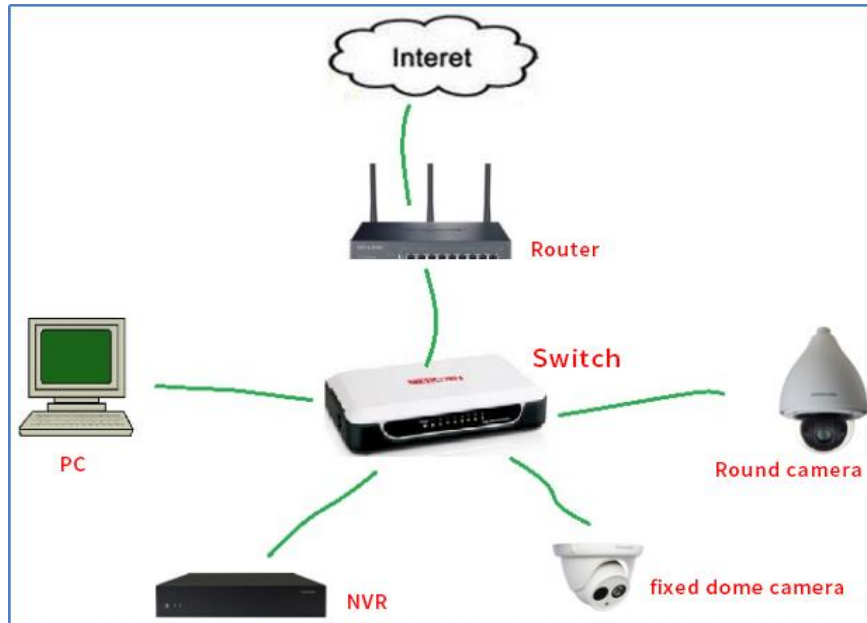


Step 2: Download and install the debugging software

The required software: IPCsearch and NVRStation

The batch tool: Batch tool and WZtool

Download address: <http://www.opretail.com/#/download>


The Installation Guide for NVR and IP Cameras

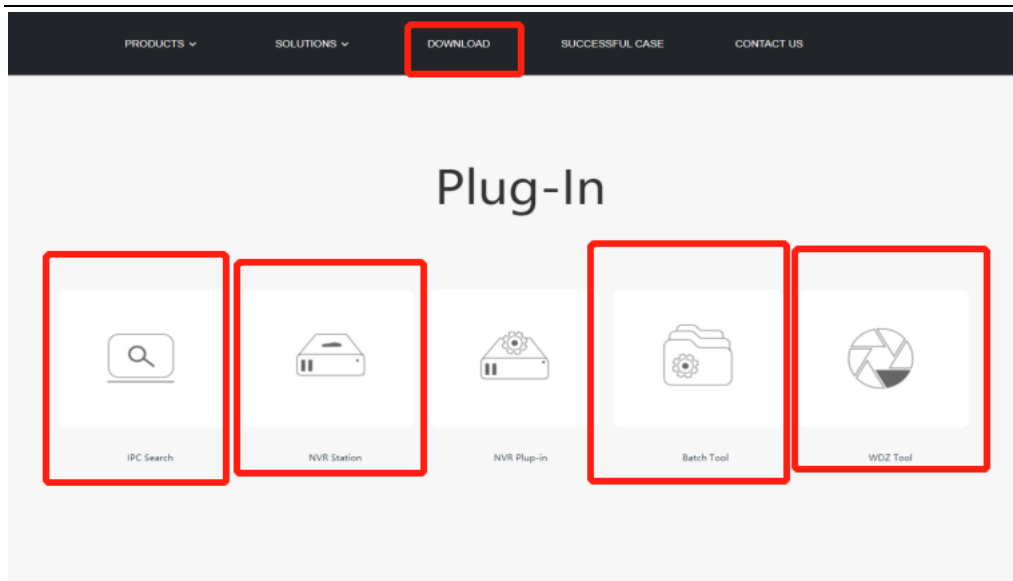

Step 3: set the NVR's IP address




- 1) IPC Search , You can search the IP address, model, DHCP status and MAC address of 01,NVR, PC4 and FR3.
- 2) Modify the IP address of NVR.

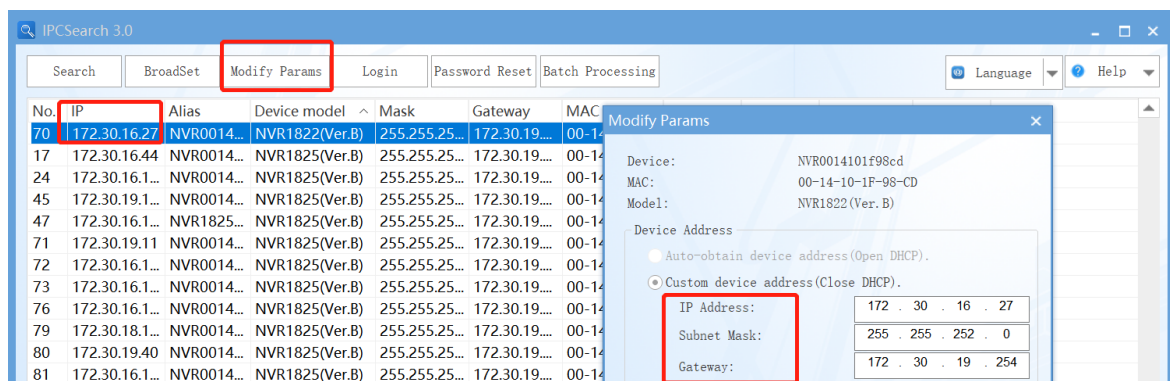


If there is no special requirement for the IP address, the last bit of the IP address should be modify first (for example: 172.30.16.27, should be modify "27" first). Ping test should be done before setting up to prevent IP conflicts, and the Gateway and the Subnet Mask must be set right!

- 3) Activate 01 (NVR does not need to be activated)

The Installation Guide for NVR and IP Cameras

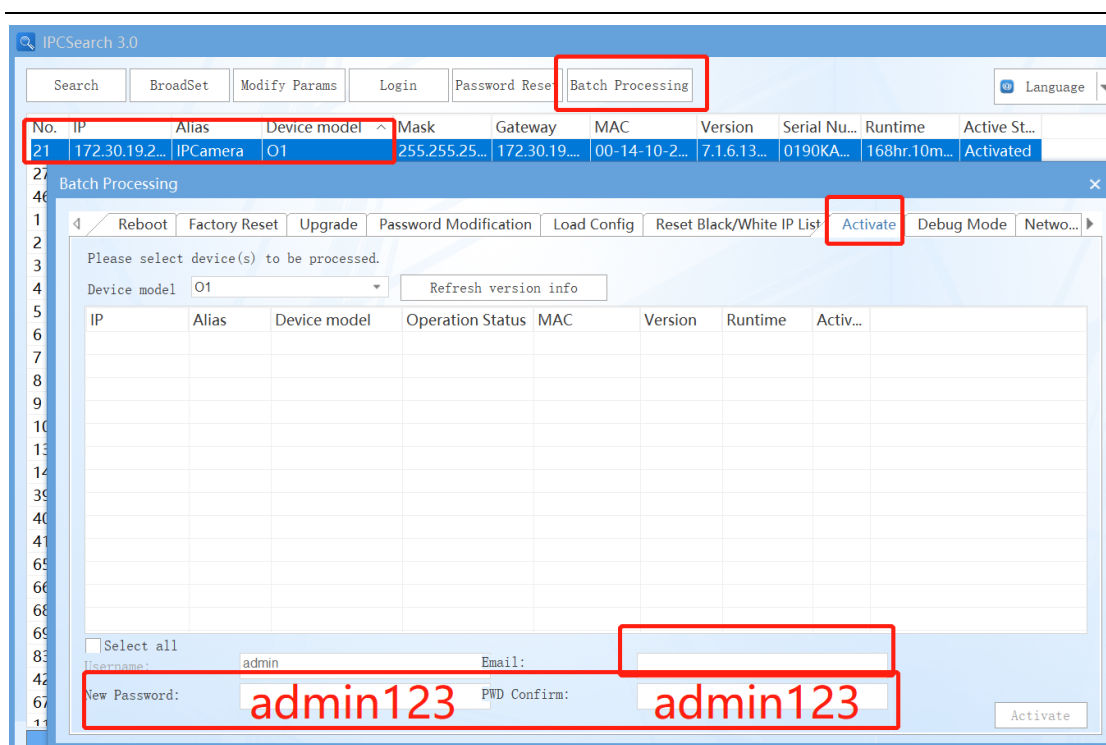

4) Modify the IP address of 01

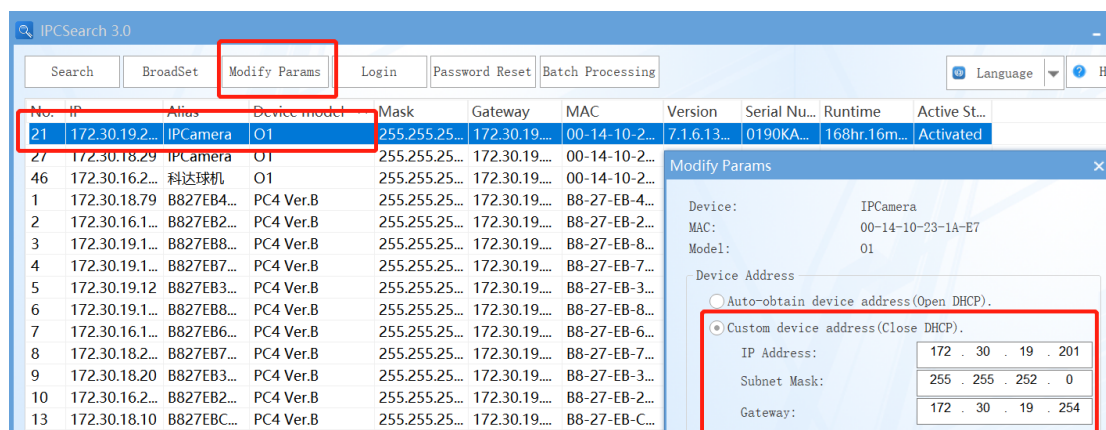

Warning: do not repeat with other cameras' IP address


Step 4: activate and set up IP cameras




- 1) Run the device network search software, We can search the IP address, model, DHCP state, MAC address of D6P, D10PS, etc.
- 2) Activate the camera, and set the password to admin123. After activation, the

The Installation Guide for NVR and IP Cameras


pop-up box will prompt "successfully activated"

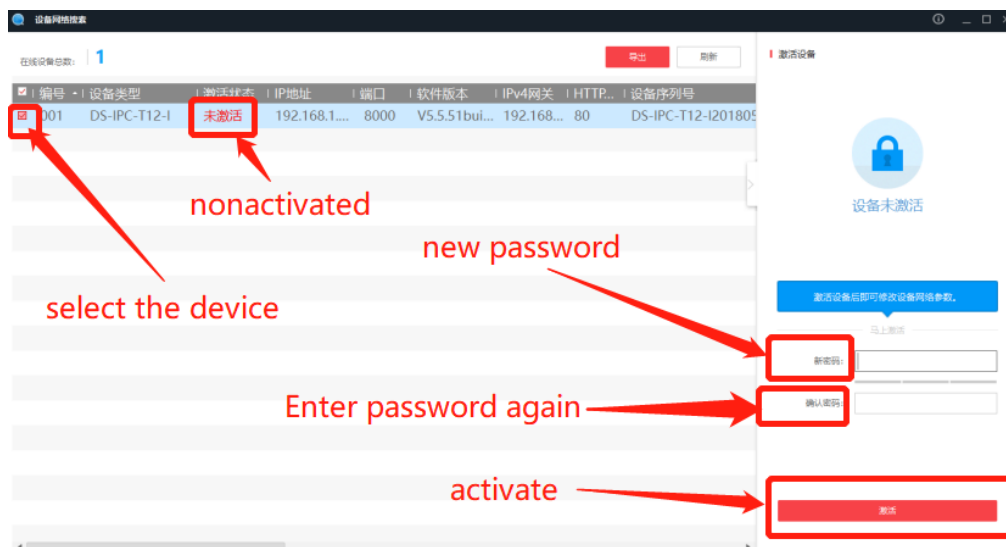


- 3) Set the unique IP address. Set subnet mask and gateway to the same network segment with IP,

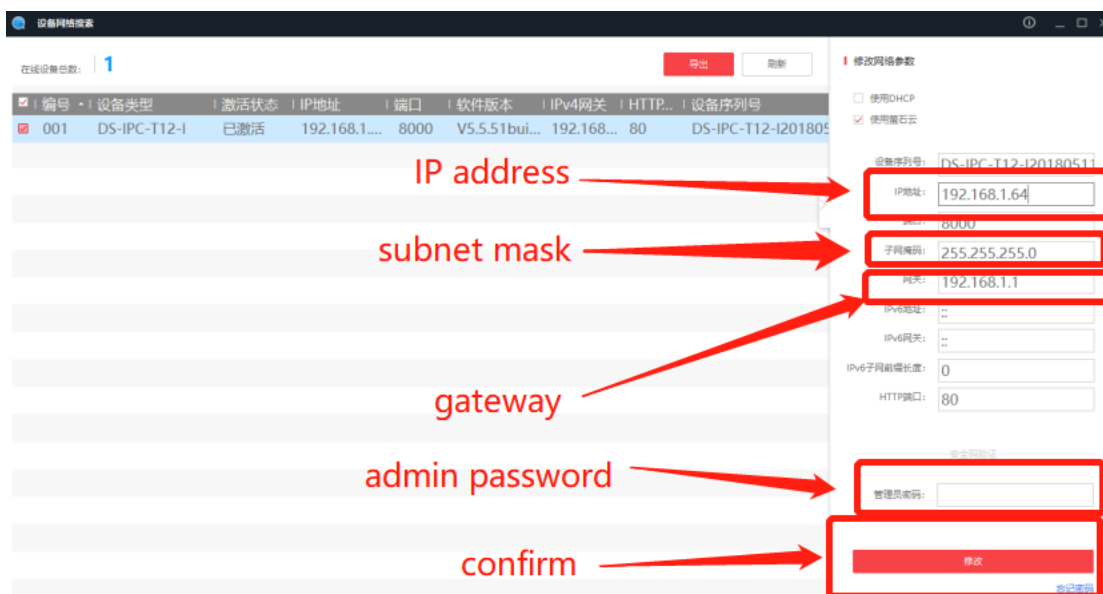


 Step 5: set the ONVIF parameters of the camera




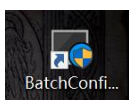- 1) Run , and follow the following steps to set it up


The Installation Guide for NVR and IP Cameras

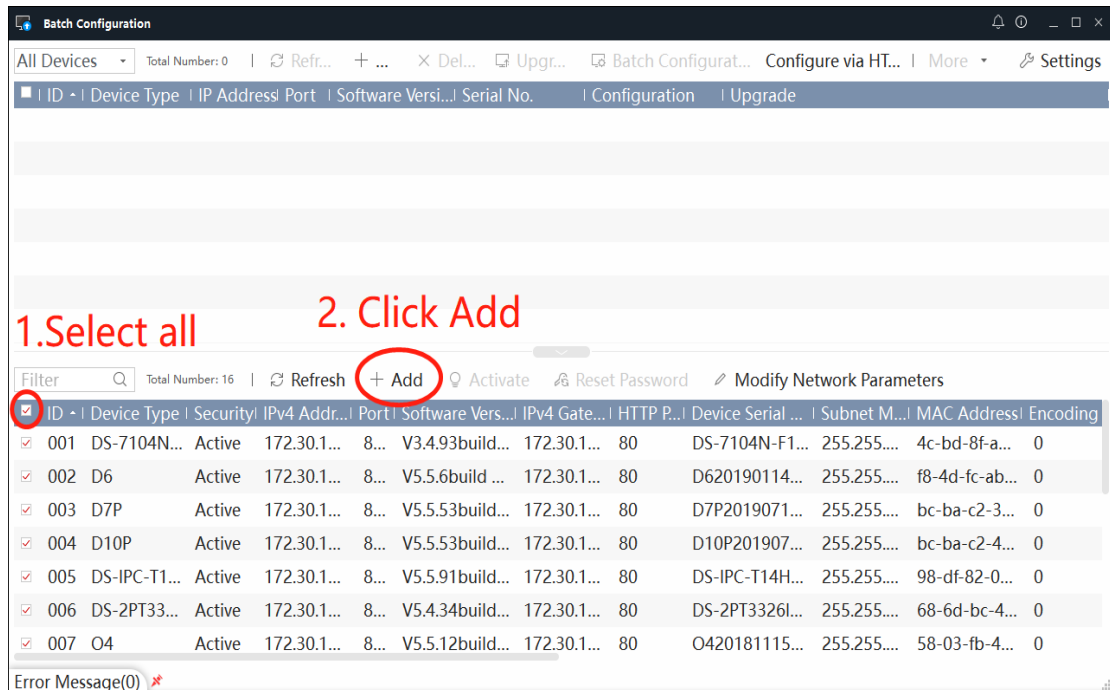

2) Enter the administrator account name “admin” and the password “admin123”

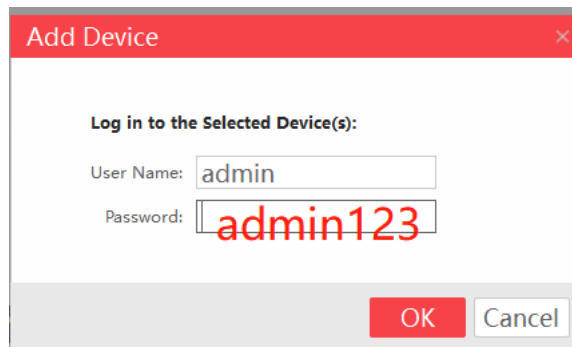


3) Select all cameras and configure ONVIF parameters

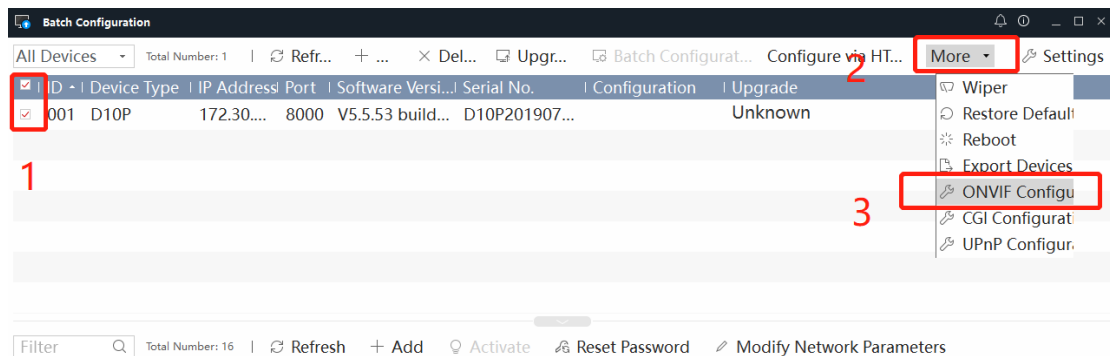

The Installation Guide for NVR and IP Cameras

- 4) Enter name: admin, password: admin123 and select administrator

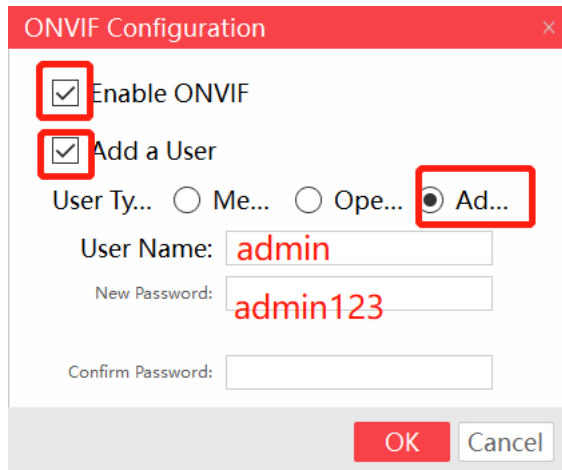

ONVIF Configuration

Enable ONVIF

Add a User

User Ty... Me... Ope... Ad...


User Name: admin

New Password: admin123

Confirm Password:

OK Cancel

- 5) Reboot the camera to ensure that the parameter Settings take effect

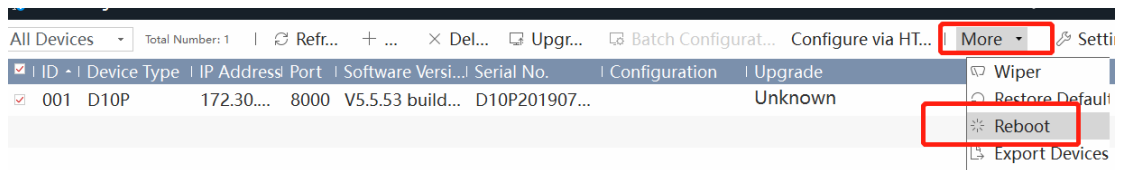


Step 6: log on to NVR




- 1) Run NVR software. Enter the user name and password and check automatic login.

The Installation Guide for NVR and IP Cameras

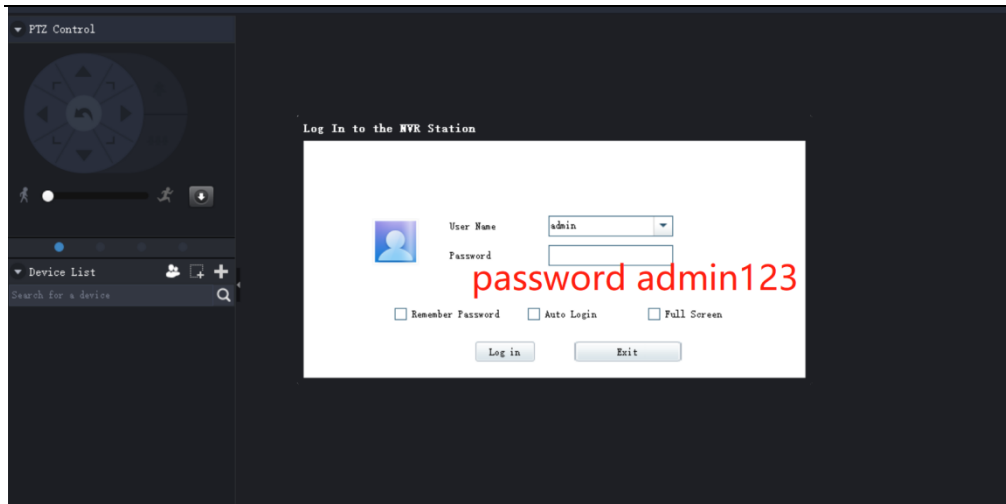


2) Add a NVR

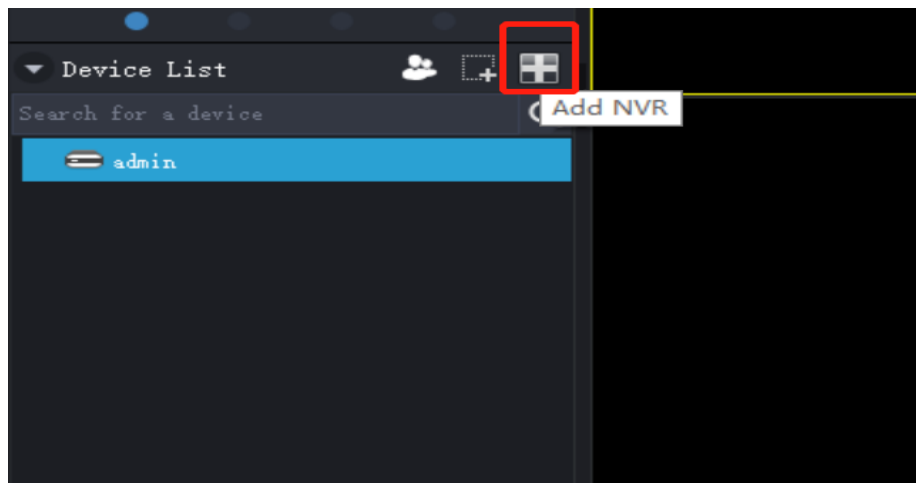


3) Fill in the name, user name, password, NVR IP address.

The Installation Guide for NVR and IP Cameras

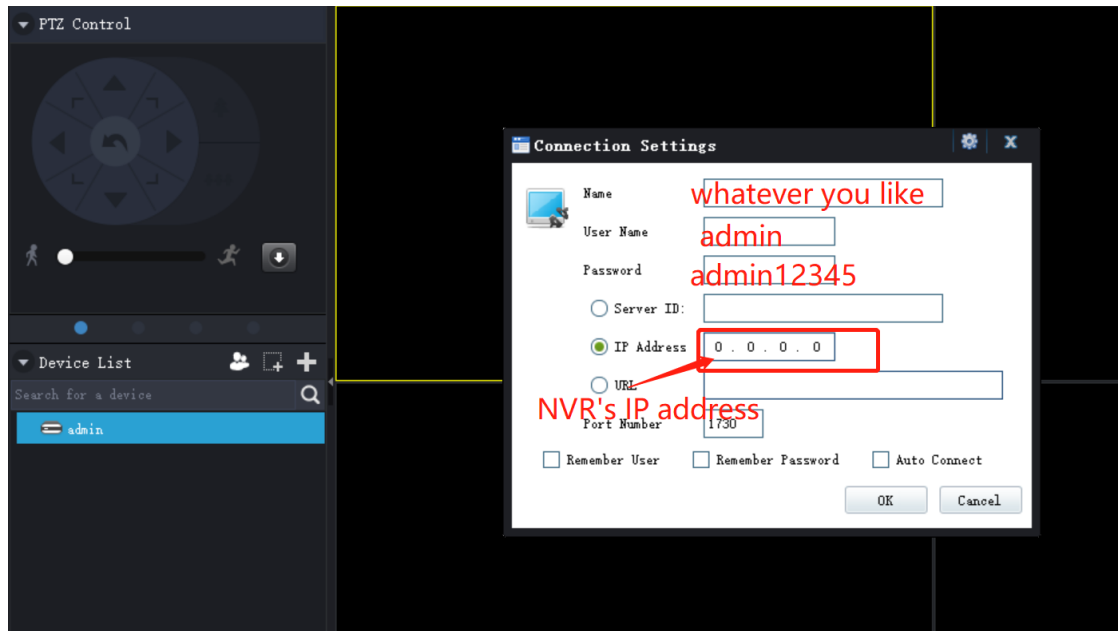


4) Connect the NVR

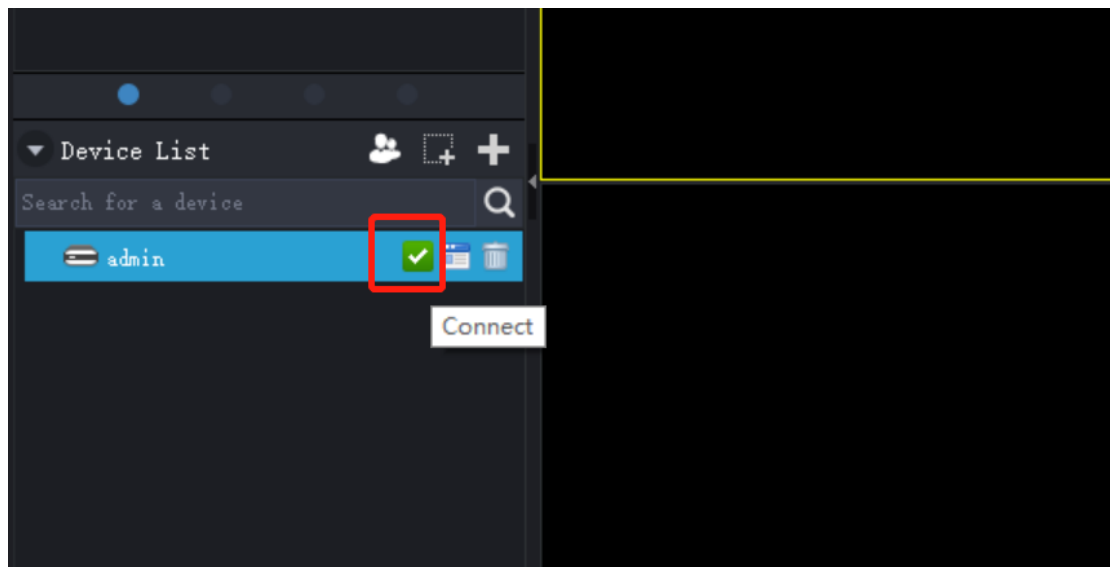

Step 7: add a camera

- 1) Click "add/delete device"

The Installation Guide for NVR and IP Cameras

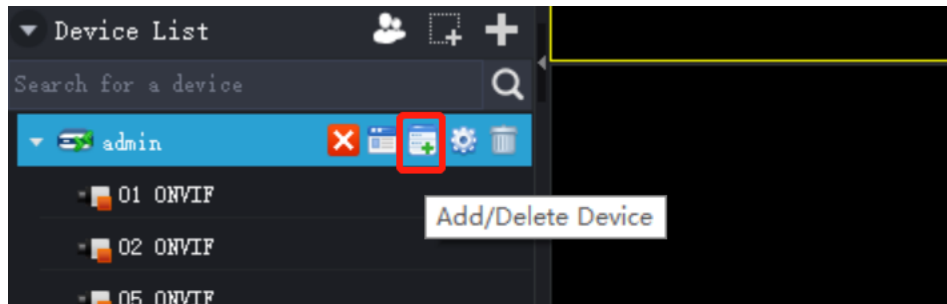


2) Select cameras you want to add

Search Results Available/Max Encoder Number: 8 / 16


Model Name	IP Address	Driver	Device Type
<input type="checkbox"/> 西南角	172.30.16.11	IPC2211-FN-AIR40-LICamera	
<input checked="" type="checkbox"/> ACD DOOR	172.30.19.183	KSCA120-ANW-FC (Ver.Camera)	
<input checked="" type="checkbox"/> IPCamera	172.30.19.41	IPC2211-HN-SIR30-LICamera	
<input type="checkbox"/> 财务	172.30.16.6	IPC2211-FN-AIR40-LICamera	
<input checked="" type="checkbox"/> 西2	172.30.16.13	IPC2211-FN-AIR40-LICamera	
<input type="checkbox"/> 张瑞的IPC(喇叭2)	192.168.1.45	IPC2211-FN-AIR40-LICamera	
<input type="checkbox"/> FACE IPC	172.30.19.57	IPC2452-Gi4N	Camera
<input type="checkbox"/> IPCamera	172.30.19.110	IPC421-F120-NO	Camera
<input type="checkbox"/> 大厅直播	172.30.19.100	IPC2211-HN-SIR30-LICamera	
<input type="checkbox"/> 张瑞的IPC	172.30.19.199	LC2211-HN-DIR30-LOCamera	

3) Add cameras(if you need to enter the username and password, they are the same one that used when setting for ONVIF which are admin/admin123)

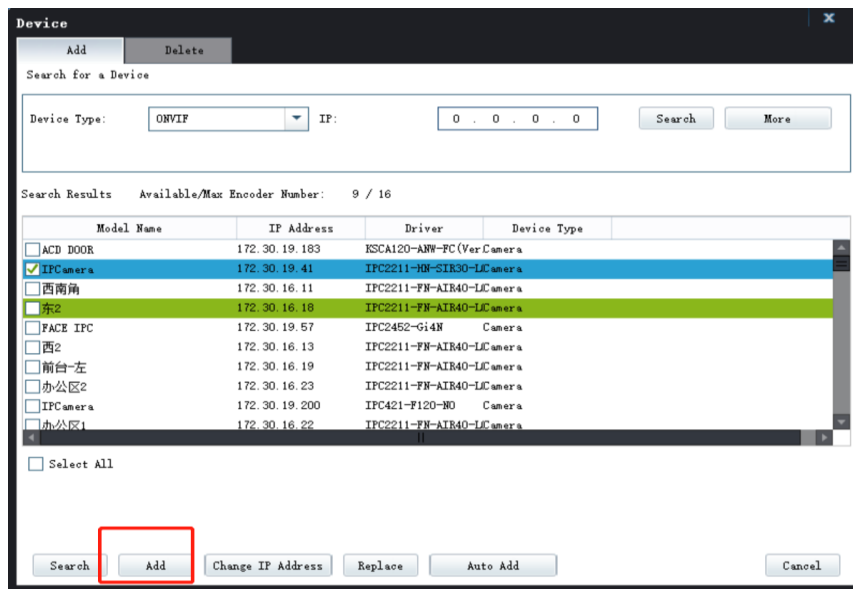


4) Drag added cameras to the screen for viewing

The Installation Guide for NVR and IP Cameras

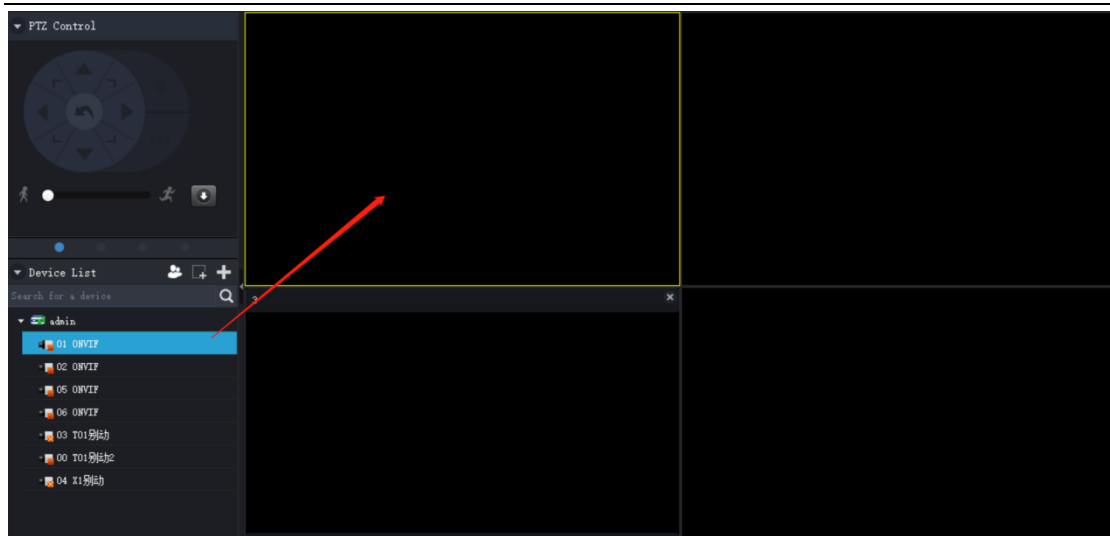


Step 8: NVR access to the cloud platform

1) Log in at <http://www.opretail.com/#/login> use a computer. Google Chrome is recommended

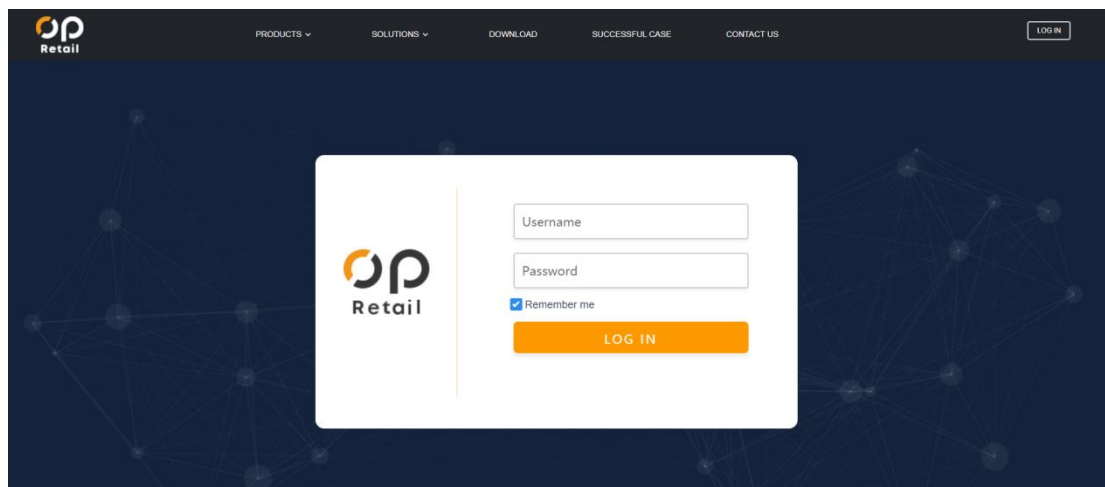


2) Go to Device Mgmt select Add

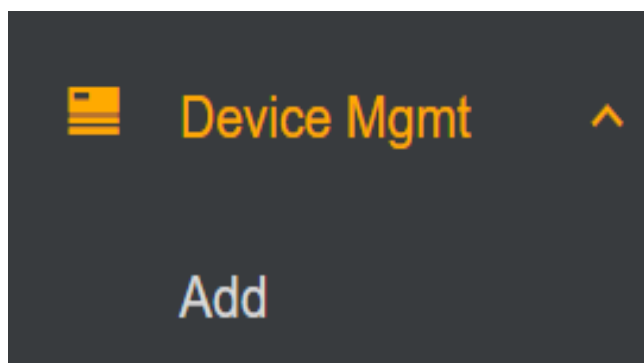


The Installation Guide for NVR and IP Cameras

3) Select a store

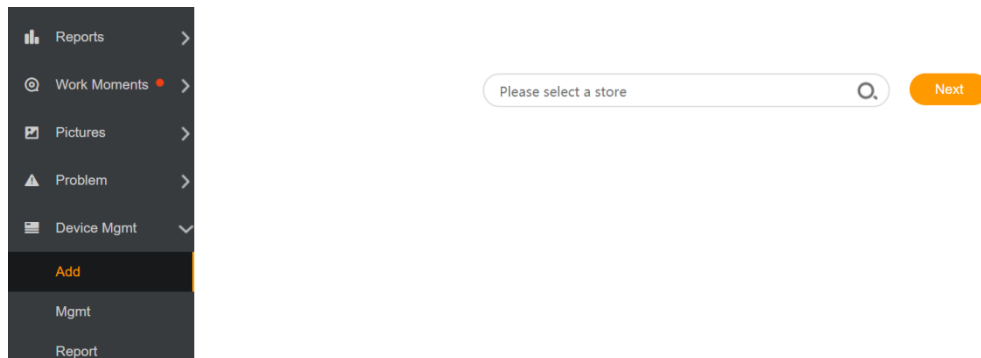

4) Enter the MAC address of the device. Then, Enter the password for the device, which is admin12345 by default

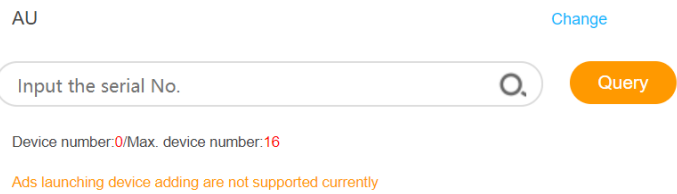

5) Once the connection is successful, we can see the device from the device mgmt

